

TRANSMITTER REGISTRATION

- The codes of up to three transmitters can be registered into the trunk lock control unit memory. (If a fourth code is stored, the code which was registered first will be erased.)
- Make sure to keep the timing between 1 and 4 seconds for each action. Too fast or too slow will cause the control unit to lose the stored codes.

1. Turn the ignition switch to "ON." Between 1 and 4 seconds, press the trunk opener button on the transmitter while aiming transmitter at the trunk. Between 1 and 4 seconds, turn the ignition switch to "OFF."

2. Between 1 and 4 seconds, turn the ignition switch back to "ON." Between 1 and 4 seconds, press the trunk opener button on the transmitter while aiming transmitter at the trunk. Between 1 and 4 seconds, turn the ignition switch to "OFF."

3. Between 1 and 4 seconds, turn the ignition switch back to "ON." Between 1 and 4 seconds, press the trunk opener button on the transmitter while aiming transmitter at the trunk. Between 1 and 4 seconds, turn the ignition switch to "OFF."

4. Between 1 and 4 seconds, turn the ignition switch back to "ON." Between 1 and 4 seconds, press the trunk opener button on the transmitter while aiming transmitter at the trunk. Confirm that the turn signal lights blink twice. Leave the ignition switch "ON."

5. Within 10 seconds, aim the transmitters (up to three) that you want to store codes in at the trunk and press the trunk opener button once on each transmitter. Confirm that the turn signal lights blink twice. Turn the ignition switch to "OFF."